


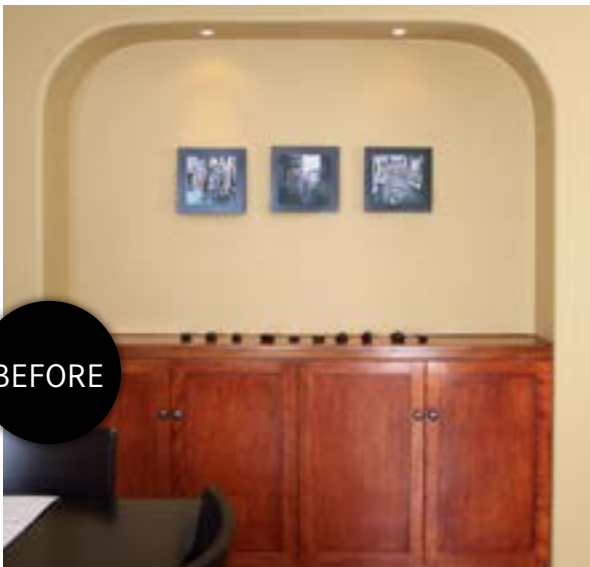

# step-by-step with Modern Masters

## METALLIC PAINT | A Guide to a Shimmering Tone-On-Tone Metallic Finish



Metallic Paint Collection Blackened Bronze  
Matte & Satin Metallic Finish

It's easy to create a shimmering tone-on-tone metallic finish using the same color in 2 different sheens. There are 15 [Matte Metallic Paint colors](#) to choose from.

Modern Masters Metallic paint is extremely versatile and can be applied using several different tools and techniques to decorate almost anything. You are only limited by your imagination!

### SUPPLIES

Work clothes, dropcloth, 2" painter's tape, masking paper (optional), clean jersey cotton rags, 9" roller (3/8" nap), 6" roller (3/8" nap), Modern Masters Natural Sea Sponge Mini Roller, roller frames, paint trays, clean bucket, step stool.

### PREP IT

You should have a clean sound surface free of any dirt or dust. Surface should be prepared with either an acrylic primer or low sheen acrylic paint. Tape any surrounding edges or walls to prevent getting paint on them. Apply masking paper on any countertops or cabinets that are in the area that is to be painted. Lay dropcloth along the edge of your work area. With the lid tightly in place, shake the jar well and you are ready to begin.



# Step-by-Step with Modern Masters

## METALLIC PAINT | A Guide to a Tone-On-Tone Shimmering Finish

### PAINT IT

#### BASECOAT: MATTE METALLIC

1. Cut in the edges first. Use the 6" roller on a section about four feet across by the height of the surface.
2. While wet, use the 9" roller to paint the larger areas. Roll in an up and down motion, then lightly back roll from the top to the bottom to help smooth the finish and orient the metallic particles. Leave a 2" "wet edge" to work in the next section. Repeat this process until the entire surface is complete and let dry for about 1/2 hour.
3. Apply a second coat and let dry for one to two hours. Depending on the color, you may need to apply a third coat for solid coverage.



#### SEA SPONGE FINISH: SATIN METALLIC

4. Rinse the sea sponge mini roller with water and squeeze out any excess. Using Satin Metallic Paint, randomly roll across the surface working in 4' sections. While wet, shape the jersey cotton rag into a pad and lightly tap the surface to flatten any bubbles left from the roller. Repeat until entire surface is complete and let dry.
5. Remove painter's tape and masking paper from the surrounding areas.

*You are done!*